

# Installation Instructions

## 1 Way Easy Latch Hinge Kit for Steel

Tel: 01782 339348 Fax: 01782 339349

sales@centrewire.com


www.centrewire.com

Mossfield Road, Adderley Green, Longton, Stoke-on-Trent, ST3 5BW



Before installation of the hinge set please ensure that the package contains all the items shown in the photograph (Left).

- 1 x Top Rail Guide Plate.
- 2 x U Bolt c/w Washer and Nyloc Nut.
- 1 x Shoot Bolt 335mm Long c/w D loop Handle.
- 1 x 25.5mm OD Spring x 128mm Long.
- 1 x M20 Washer.
- 1 x Roll Pin 5.5mm x 32mm Long.
- 1 x Auto Catch on RSF holed twice.
- 1 x M10 x 50 Nut / Bolt / Washer.
- 2 x M10 x 100 Coach Screw.

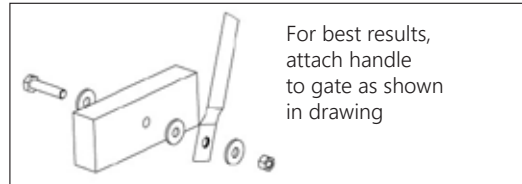

1. Remove the existing slide bolt from the gate and refit the Easy Latch ® using the M20 washer and roll pin to secure the spring.
2. Fit the Handle Guide to the top rail and secure using the 2 x U Bolts, Washers and Nylocs. NOTE – the handle should be vertical when in resting position.
3. Fit the handle through the handle guide, fit through the D loop of the slide bolt and attach to the 3rd or 4th rail of the gate. (You may need to drill the horizontal rail for the bolt )
4. Tighten but loose enough to allow handle to be operational.
5. Attach auto gate catch to slam post if required in the appropriate position and cut off excess length of the slide bolt and U bolt Thread.
6. Check that the kit works perfectly and tighten all bolts
7. File and smooth off any rough edges.



If you need any further advice/guidance regarding the installations of any of our products please contact the office.

We strongly advise the use of personal safety equipment where appropriate: gloves, glasses boots etc.

**Centrewire**®